























60 min






Instrukcja montażu F7

x21  D	x21  C	x13  KD	x1  KL	x15  W – Ø3,5x16	x70  G
x12  B	x3  ZS	x2  U	x4  N	x1  P1	x1  P2
x4  W2	x13  R	x1  I	x21  D1	x8  W3 3.5x40	
mini  mini					
x20  W1					

1


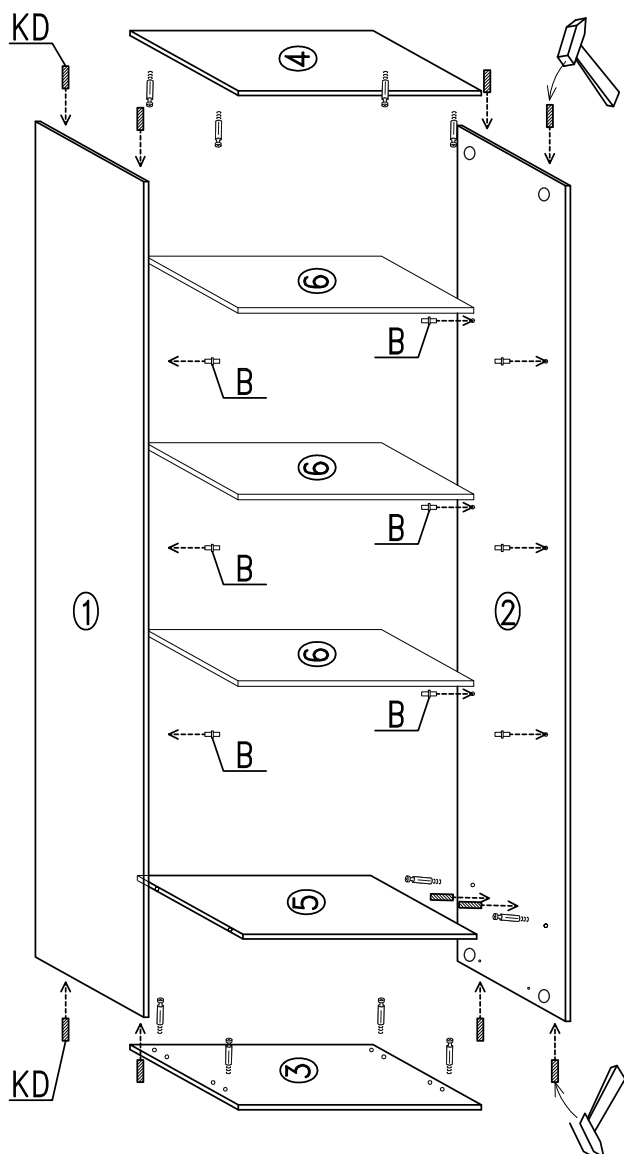


2

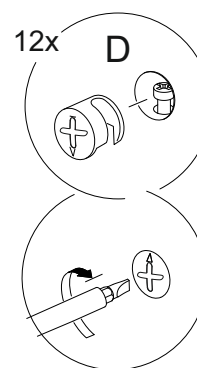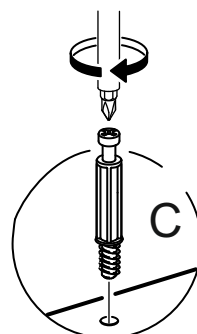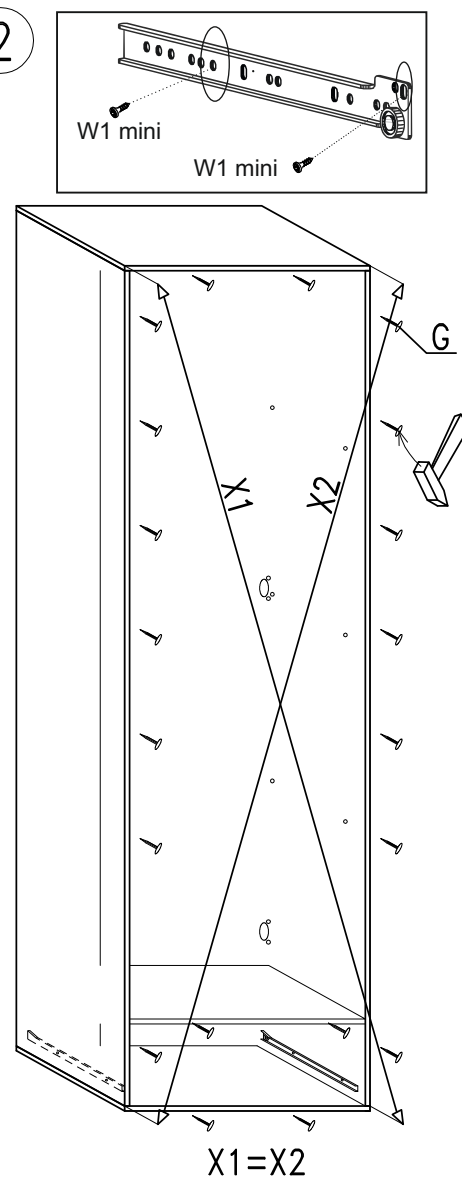


X1=X2


3

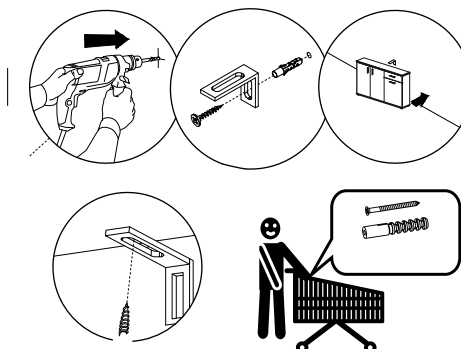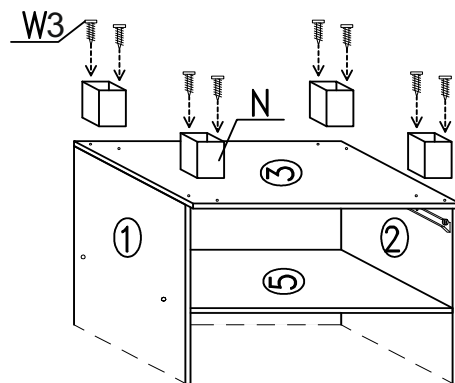

4

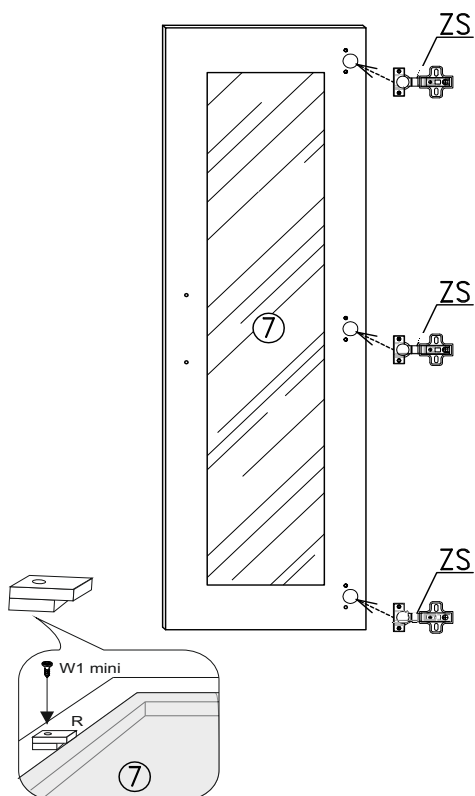

5

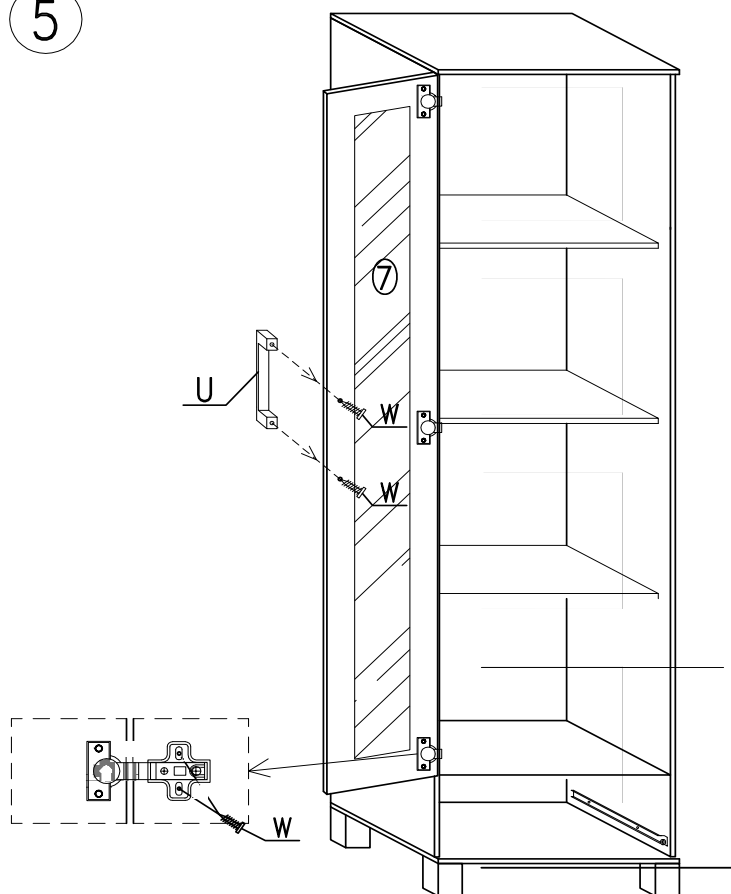

6

