






















60 min


Instrukcja montażu F3

x21		x21		x21		x17		x110		x12	
	D		C		KD		W – Ø3,5x16		G		B
x8				x4		x1		x8			
	W2		ZS		ZS		U		N		KL
x21			mini								
	D1			x17		x16					
			W1		W3 3.5x40						
x17											
	R										


1

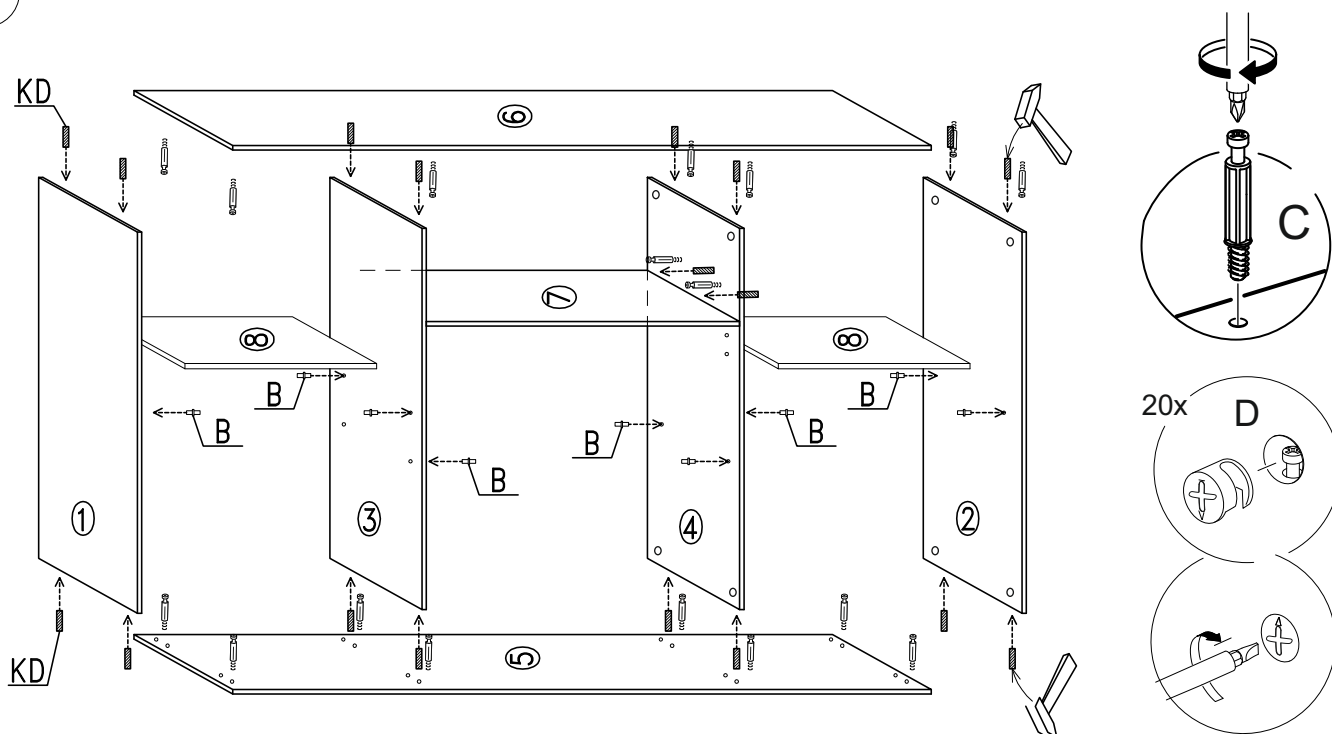


2

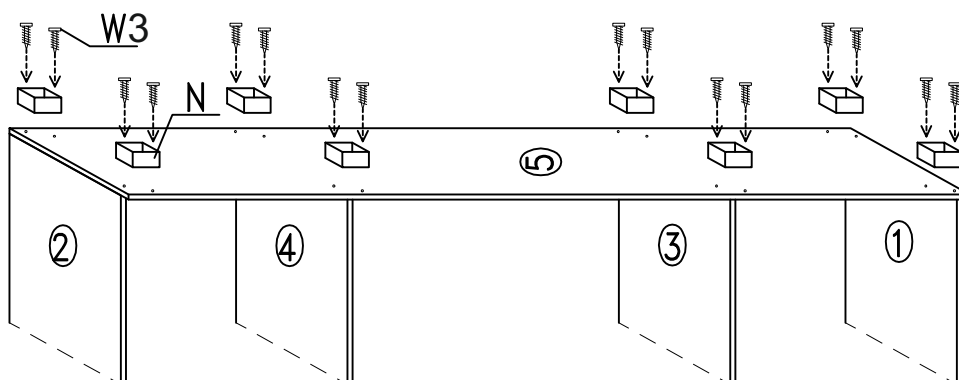


3

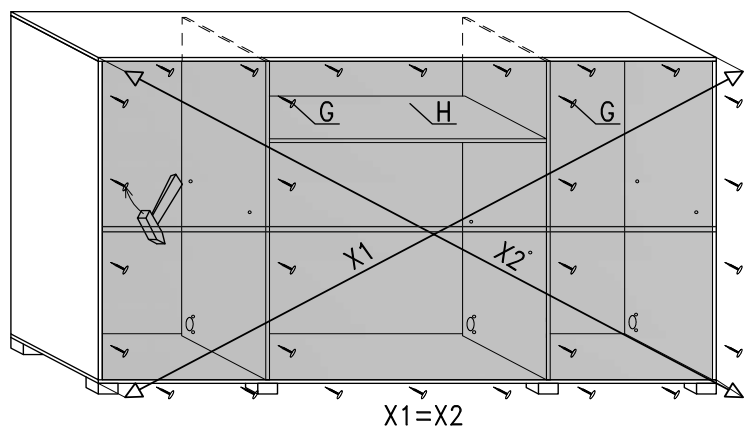

4

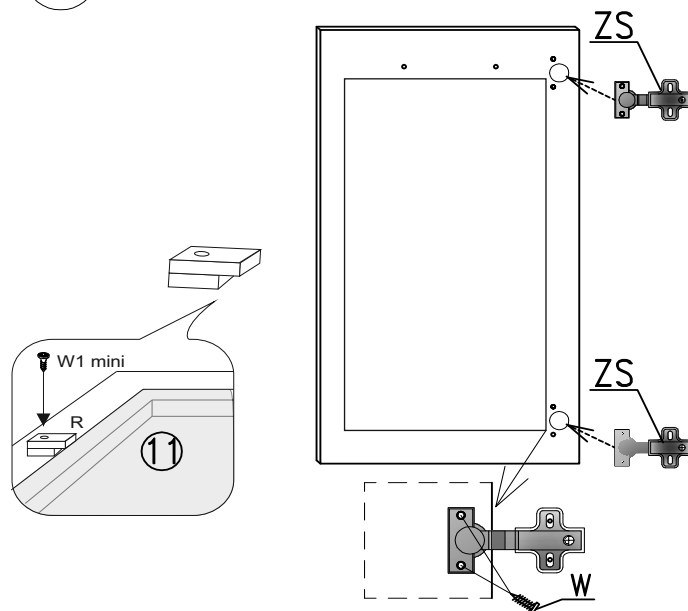

5

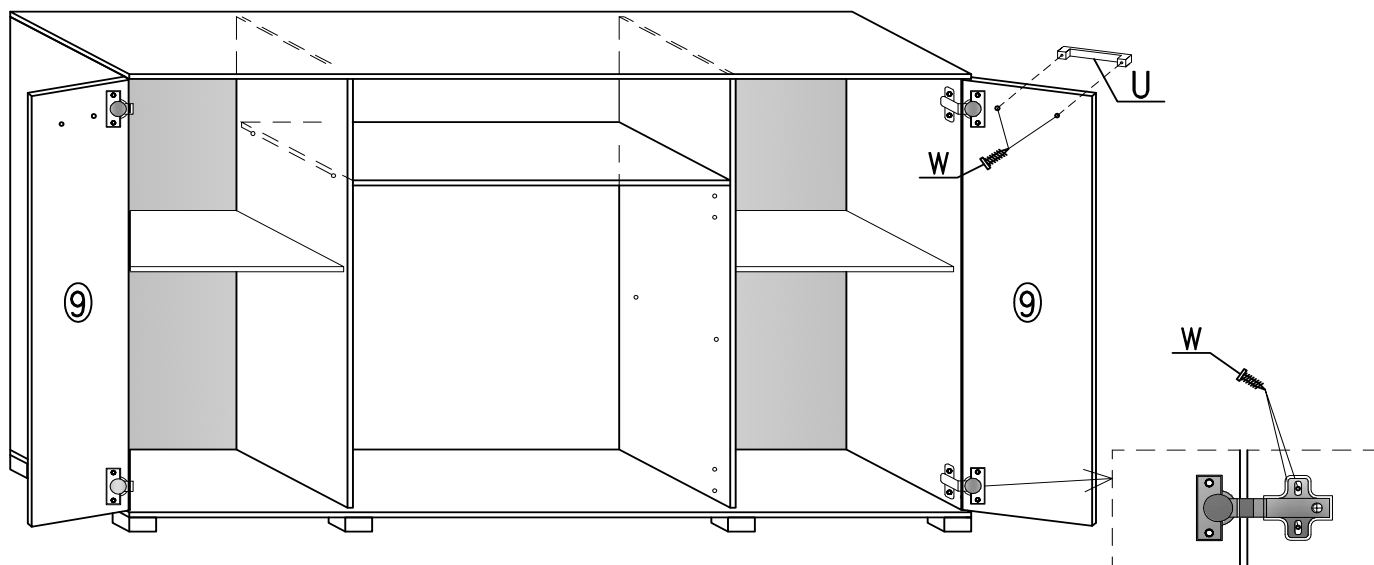

6

